Visit Us Online

For more information about Basalite paving stones, retaining walls, accessories, patterns or installation instructions, visit us online at basalite.com.





605 Industrial Way Dixon, CA 95620 **800-776-6690** 11888 West Linne Road Tracy, CA 95376 **800-776-6690** 1201 Golden State Blvd Selma, CA 93662 **559-896-0753**

CALIFORNIA • COLORADO • IDAHO • NEVADA • OREGON • WASHINGTON • BRITISH COLUMBIA www.basalite.com











BA537 5000 GSL 2/27/12

©2012 Basalite® Concrete Products, LLC. All trademarks ® are registered trademarks.

The U.S. Green Building Council Member logo is a trademark owned by the U.S. Green Building Council and is used by permission.

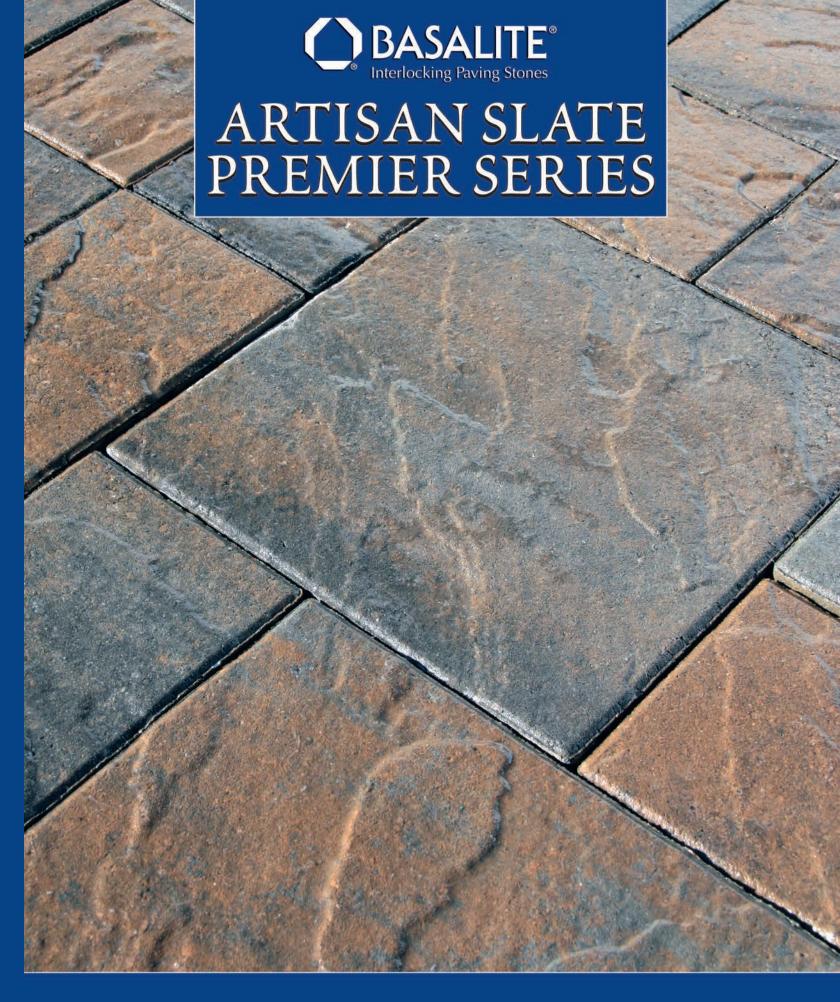

www.basalite.com

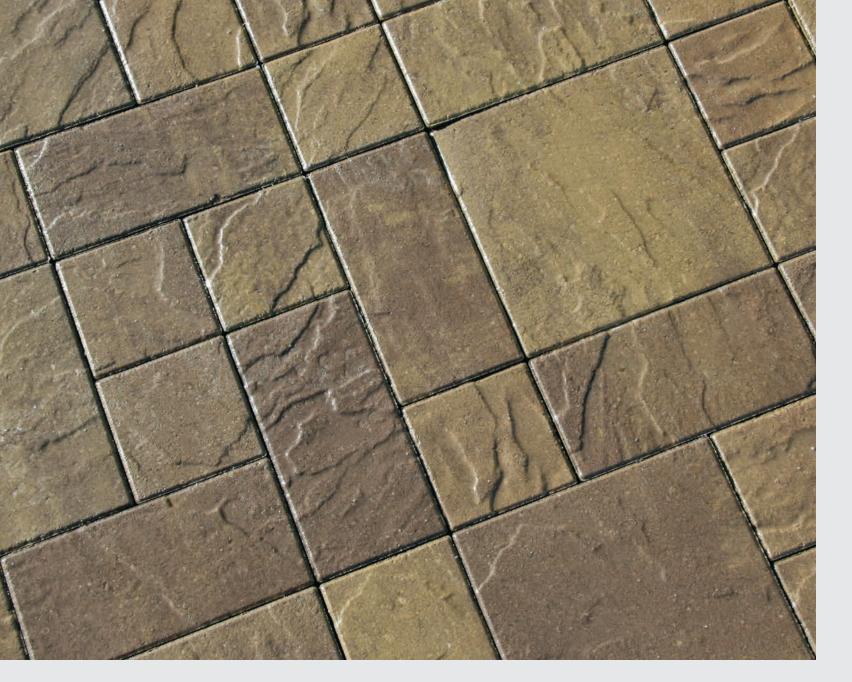


ARTISAN SLATE PREMIER SERIES

Interlocking Paving Stones


Artisan Slate Premier Series is designed to provide a bold paver solution with the highest of flexibility in design patterns. Highlighted by a large 12"x12" paver, each stone features subtle textures that provide the look of real stone combined with the strength and durability of an interlocking paving stone.

Above: Artisan Slate Premier Series in Venice. Cover: Artisan Slate Premier Series in Positano.


Specifications



Weight: 7 lbs Units/Pallet: 448 Sq. Ft./Pallet: 108




Style: 6x12 Weight: 13.5 lbs Units/Pallet: 189 Sq. Ft./Pallet: 94



Style: 12x12 Weight: 20 lbs Units/Pallet: 128 Sq. Ft./Pallet: 122

Patterns

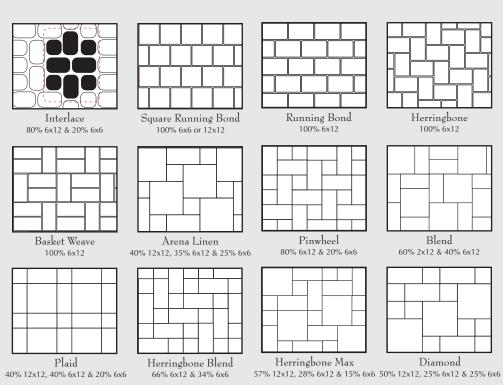


Typical Paver Installation*

*The installation instructions and illustrations shown are a basic overview of paver installation methods.

Because of the variety of applications, please refer to the Basalite® installation guide or visit us online at basalite.com.

1. Excavate unsuitable, unstable or unconsolidated subgrade material and compact the area which has been cleared. Backfill and level with dense graded aggregate suitable for base material (typically 3" - 6" for pedestrian/light vehicular traffic and 8" - 10" for driveway applications), or as otherwise directed by site engineer/architect/landscape architect.

- 2. Install edge restraint using concrete curb, concrete toe or edging.
- 3. Place bedding course of sharp normal weight screening or concrete sand to a uniform depth of approximately 1" leveled to grade.
- 4. Install Basalite Pavers hand tight with joints approximately 1/8". Where required, cut stones with an approved cutter to fit accurately.
- 5. Tamp pavers with mechanical vibrator uniformly level true to grade and free of movement.
- 6. Fill voids in joints by sweeping, dry, fine, sharp sand over pavers.

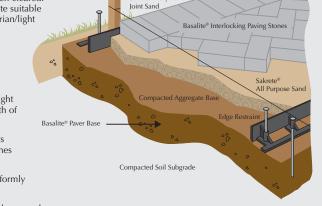

Colors



Positano



Venice

NOTE: Printed colors shown in this brochure may vary from actual product colors. We recommend color selection

be made from actual product samples.